
Electro-Pneumatic Regulator/Electronic Vacuum Regulator


ITV Series

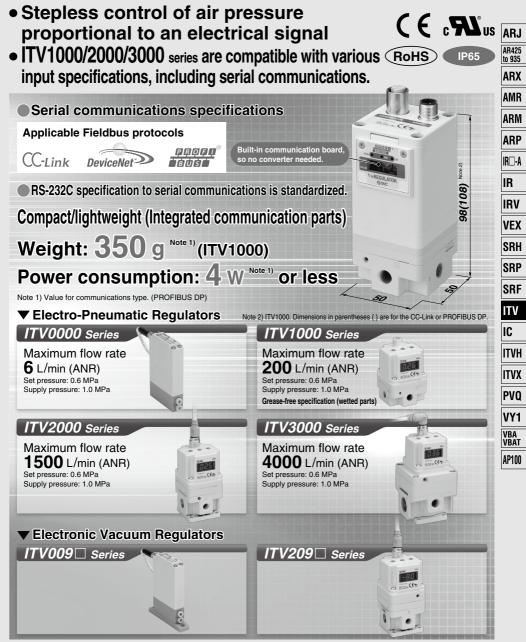


SMC

Compact Electro-Pneumatic Regulator ITV0000 Series

Compact Vacuum Regulator IT V009 Series

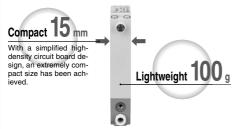

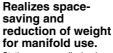

Stations can easily be increased or decreased due to DIN rail mount design.



Model	Pressure range	Power supply voltage	Input signal	Output signal	Option		
ITV001□	0.1 MPa		4 to 20 mA DC		Cable connectors		
ITV003□	0.5 MPa		24 VDC	24 VDC 0 to 20 mA DC 12 VDC 0 to 5 VDC	Analog output	Straight type Right angle type	
ITV005□	0.9 MPa				12 VDC	12 VDC	
ITV009□	-100 kPa		0 10 10 VDC		L-bracket		


Equivalent to IP65

Linearity: ±1% F.S. or less
 Hysteresis: 0.5% F.S. or less
 Repeatability: ±0.5% F.S. or less

High-speed response time: 0.1 sec (Without load)


Note) This is not a guaranteed value as it depends on the operating environment.

High stability

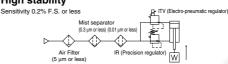

■ Cable connectors

Straight type and right angle type are available.

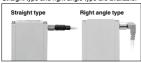

■ Built-in One-touch fittings

With error indication LED

■ Brackets

Flat and L-brackets are available.



Electro-Pneumatic Regulator ITV/1000/2000/3000 Series Electronic Vacuum Regulator ITV/209 Series






Serial communications specifications to ITV1000/2000/3000 series are standardized.

Reduced wiring

Applicable Fieldbus protocols


RS-232C specification to serial communications is standardized.


- Sensitivity: 0.2% F.S. or less
- Linearity: ±1% F.S. or less
- Hysteresis: 0.5% F.S. or less
- IP65
- Cable connections in 2 directions

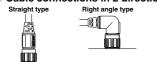

Grease-free specification (ITV1000 series)

Application examples

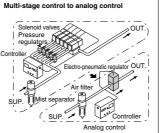

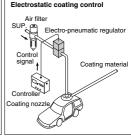

Electro-Pneumatic Regulator Electronic Vacuum Regulator

Stepless control of air pressure proportional to an electrical signal.

				3			
	Series	Model	Set pressure range	Input signal	Port size	Page	ARJ
	ITV0000 Series	ITV001□	0.001 to 0.1 MPa	Current type: 4 to 20 mA DC (Sink type)			AR425 to 935
ı		ITV003□	0.001 to 0.5 MPa	Current type: 0 to 20 mA DC (Sink type)	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	896	AMR
ı	8	ITV005□	0.001 to 0.9 MPa	Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	IIICII SIZE. Ø5/32		ARM
l.	ITV1000 Series	ITV101□	0.005 to 0.1 MPa				ARP IR□-A
ulato		ITV103□	0.005 to 0.5 MPa		1/8, 1/4	904	IR
ic Rec	73 march 2	ITV105□	0.005 to 0.9 MPa	Current type: 4 to 20 mA DC (Sink type)			IRV VEX
umat	ITV2000 Series	ITV001	0.005 to 0.1 MPa	Current type: 0 to 20 mA DC (Sink type)			SRH
o-Pne	Electro-Pneumatic Regulator	ITV201		Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input (4 points/16 points)		004	SRP
Electr		ITV203□	0.005 to 0.5 MPa		1/4, 3/8	904	SRF
		ITV205□	0.005 to 0.9 MPa	10 bit digital input CC-Link compatible			IC
ı	ITV3000 Series	ITV301□	0.005 to 0.1 MPa	DeviceNet™ compatible PROFIBUS DP compatible			ITVH
		ITV303□	0.005 to 0.5 MPa	RS-232C communication	1/4, 3/8, 1/2	904	PVQ
ı		ITV305□	0.005 to 0.9 MPa				VY1
	ITI/000 Corios			0			VBA VBAT
n Regulator	ITV009□ Series	ITV009□	−1 to −100 kPa	Current type: 4 to 20 mA DC (Sink type) Current type: 0 to 20 mA DC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	928	AP100
Electronic Vacuum Regulator	ITV209□ Series	ITV209□	−1.3 to −80 kPa	Current type: 4 to 20 mA DC (Sink type) Current type: 0 to 20 mA DC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input (4 points/16 points) 10 bit digital input CC-Link compatible PROFIBUS DP compatible PROFIBUS DP compatible RS-232C communication	1/4	935	


ITV Series


Compact Electro-Pneumatic Regulator

ITV0000 Series



How to Order

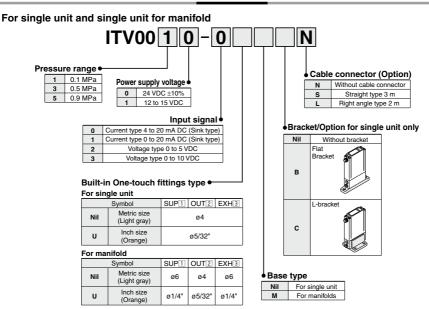

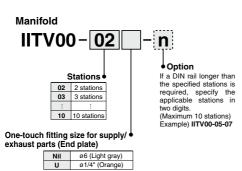

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03-----1 set (Manifold part no.)

*ITV0030-3MS-----2 sets (Electro-pneumatic regulator part no. (1, 2 stations))
*ITV0030-3ML-----1 set (Electro-pneumatic regulator part no. (3 stations))

Indicate part numbers in order starting from the first station on -

Note) Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk (*) specifies mounting. Add an asterisk (*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

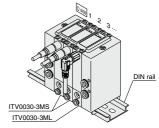



Compact Electro-Pneumatic Regulator ITV0000 Series

Specifications



Mode	l	ITV001□	ITV003□	ITV005□			
Minimum supply p	ressure	S	et pressure +0.1 MF	Pa Pa			
Maximum supply pressure		0.2 MPa	1.0 MPa				
Set pressure range		0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa			
Voltage		24 V	DC ±10%, 12 to 15	VDC			
Power supply	Current	Power supply voltage 24 VDC type: 0.12 A or less					
	consumption	Power supply volt	Power supply voltage 12 to 15 VDC type: 0.18 A or les				
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VE	C			
input signai	Current type	4 to 20 mA	DC, 0 to 20 mA DC	(Sink type)			
Innuit immedence	Voltage type		Approx. 10 kΩ				
Input impedance	Current type	Approx. 250 Ω					
Note 4)		1 to 5 VDC (Output impedance: Approx. 1 kΩ)					
Output signal Note 4)	Analog output	Output accuracy: ±6% F.S. or less					
Linearity	Linearity		±1% F.S. or less				
Hysteresis		0.5% F.S. or less					
Repeatability		±0.5% F.S. or less					
Sensitivity		0.2% F.S. or less					
Temperature chara	acteristics	±0.12% F.S./°C or less					
Operating tempera	ture range	0 to 50°C (No condensation)					
Enclosure		Equivalent to IP65 *					
Connection type		Bu	ilt-in One-touch fittir	ngs			
	For single unit	Metric size	Metric size 1, 2, 3: ø4				
Connection size	For single unit	Inch size	1, 2, 3	3: ø5/32"			
Connection size	Manifold	Metric size	1, 3: ø	6, 2: ø4			
	IMATITIOIO	Inch size 1, 3: Ø1/4", 2: Ø5/32"					
Weight Note 1)		100	g or less (without op	tion)			
Note 1\ Indicates the weight of a single unit							

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

Note 3) When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

Note 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than

te 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less tha 100 kΩ, the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

Accessories (Option)

Bracket

Flat bracket assembly (includes 2 mounting screws) P39800022



L-bracket assembly (includes 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector



Right angle type P398000-501-2



ARJ AR425 to 935

ARX AMR ARM

ARP IR□-A

IR

IRV VEX

SRH

SRP

SRF

ITV

IC

ITVH

PVQ

VY1

VBA VBAT


AP100

ITV0000 Series


Working Principle

When the input signal rises, the air supply soloenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.

Working Principle Diagram

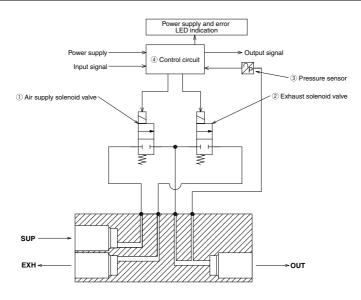



Block Diagram

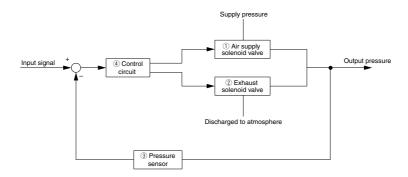

Compact Electro-Pneumatic Regulator ITV0000 Series

ITV001□ Series

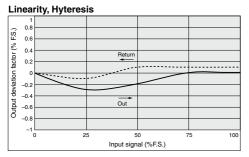

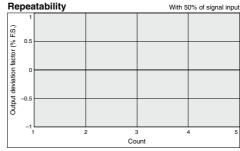

ARJ

AR425 to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV IC


ITVH


ITVX

PVQ


VY1


AP100

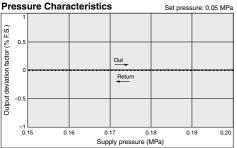


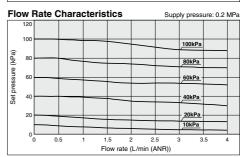


ITV003□ Series

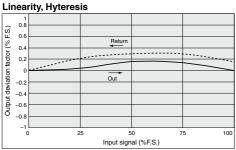

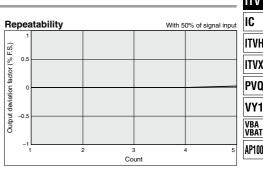


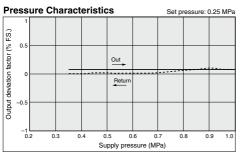


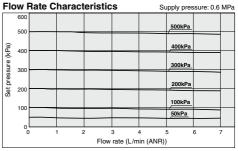



ITV0000 Series

ITV005□ Series

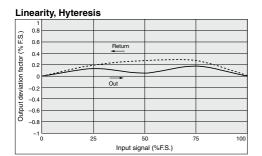

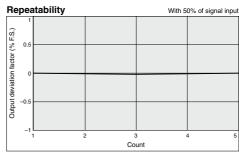


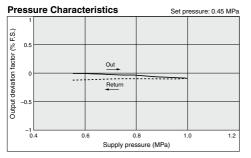

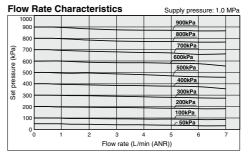

Compact Electro-Pneumatic Regulator ITV0000 Series

Dimensions

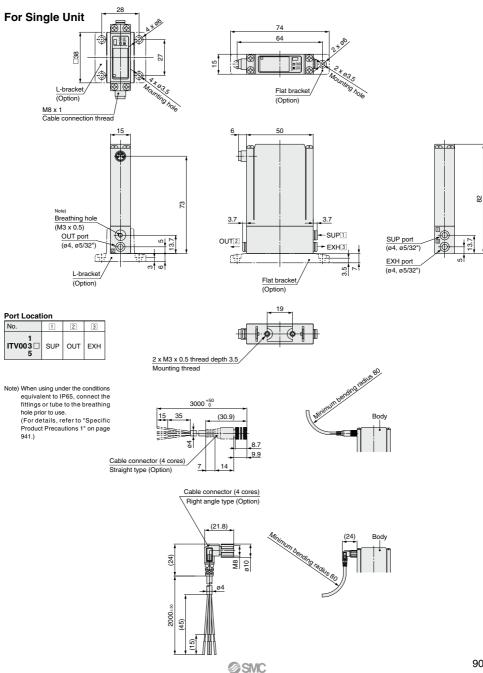

ARJ AR425 to 935

ARX AMR

ARM ARP

IR□-A IR

IRV VEX

> SRH SRP

SRF

ITV IC

ITVH


ITVX


PVQ VY1


VBA VBAT AP100


Dimensions

Single unit for manifold

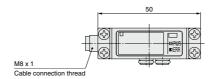


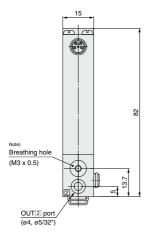

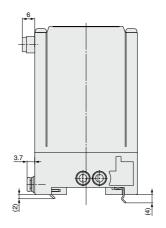

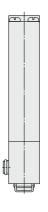

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

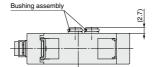


Note) For dimensions of the cable connector, refer to single unit on page 901.

Compact Electro-Pneumatic Regulator ITV0000 Series

Dimensions


Manifold

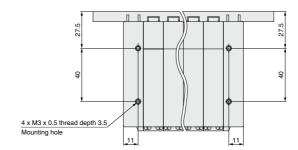



Port Location						
No. 1 2 3						
1 ITV003□	SLIP	OUT	FYH			

5

Note) Stations are counted starting from the D side.

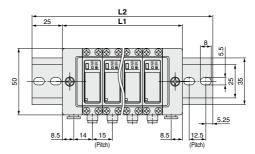

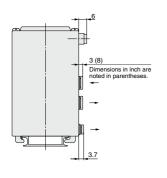

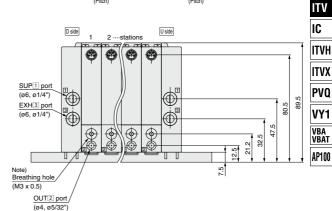

Note) For dimensions of the cable connector, refer to single unit on page 901.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use.

(For details, refer to "Specific Product Precautions 1" on page 941.)



ARJ AR425 to 935 ARX

AMR ARM

ARP

IR□-A

IR IRV

VEX

SRH SRP SRF


Electro-Pneumatic Regulator

ITV1000/2000/3000 Series

CE CRUSUS ROHS



How to Order

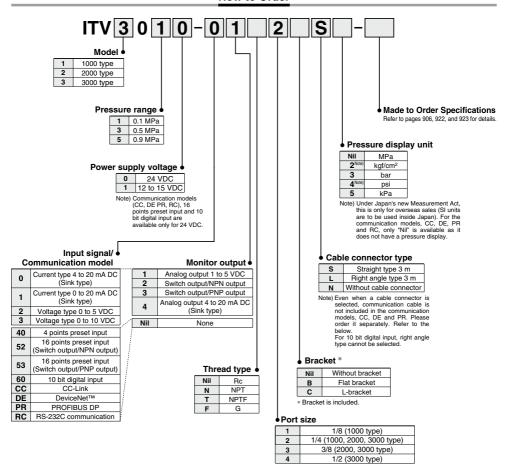

For communication cables, use the parts listed below (refer to M8/M12 connector in Best Pneumatics No.1-1 for details)

or order the product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part number	Note	
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied	
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.	
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.	
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.	
PROFIBUS DP	PCA-1557688 (Socket type)	T-branch connector not supplied.	
compatibility	PCA-1557691 (Plug type)	r-branch connector not supplied.	

Standard Specifications

ITV1000 ITV2000

ITV3000

Symbol

Rated pressure

pressure Output pre (MPa)

0.005MPa

ITV101 Note 8) ITV103 Note 8) ITV105 Note 8) ITV201 ITV203 ITV205 Model ITV301 ITV303 ITV305 Minimum supply pressure Set pressure +0.1 MPa Maximum supply pressure 0.2 MPa 1.0 MPa Set pressure range Note 1) 0.005 to 0.1 MPa 0.005 to 0.5 MPa 0.005 to 0.9 MPa Voltage 24 VDC ± 10%, 12 to 15 VDC Power supply Power supply voltage 24 VDC type: 0.12 A or less Note 9) Current consumption Power supply voltage 12 to 15 VDC type: 0.18 A or less Current type Note 2 4 to 20 mA DC, 0 to 20 mA DC (Sink type) 0 to 5 VDC, 0 to 10 VDC Voltage type Input signal Preset input 4 points (Negative common), 16 points (No common polarity) 10 bit (Parallel) Digital input Current type 250 Ω or less Note 6 Voltage type Approx. 6.5 kΩ Input Power supply voltage 24 VDC type: Approx. 4.7 kΩ impedance Preset input Power supply voltage 12 VDC type: Approx. 2.0 k Ω Digital input Approx. 4.7 $k\Omega$ 1 to 5 VDC (Output impedance: Approx. 1 kΩ) Analog 4 to 20 mA DC (Sink type) (Output impedance: 250 Ω or less) Output signal output Output accuracy ± 6% F.S. or less (monitor Switch NPN open collector output: Max. 30 V, 80 mA output) PNP open collector output: Max. 80 mA output ± 1% F.S. or less Linearity Hysteresis 0.5% F.S. or less ± 0.5% F.S. or less Repeatability 0.2% F.S. or less Sensitivity ± 0.12% F.S./°C or less Temperature characteristics Output pressure Accuracy ± 2% F.S. ± 1 digit or less display Note 4) MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1 Note 5), kPa: 1 Minimum unit Ambient and fluid temperature 0 to 50°C (No condensation) IP65 Enclosure ITV10□□ Approx. 250 g (without options) Weight Note 10) ITV20□□ Approx. 350 g (without options)

Note 1) Please refer to Figure 1 for the relationship between set pressure and input. Because the maximum set pres-

Approx. 645 g (without options)

sure differs for each pressure display, refer to page 945.

Note 2) 2-wire type 4 to 20 mA DC is not available. Power supply voltage (24 VDC or 12 to 15 VDC) is required. Note 3) Select either analog output or switch output.

Further, when switch output is selected, select either NPN output or PNP output.

When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 $k\Omega$, the analog output monitor accuracy of within $\pm 6\%$ (full span) may not be available. The product with the accuracy of

within ±6% is supplied upon your request. Output pressure remains unaffected.

Note 4) Adjustment of numerical values such as the zero/span adjustment or preset input type is set based on the minimum units for output pressure display (e.g. 0.001 to 0.500 MPa). Note that the unit cannot be changed. Note 5) The minimum unit for 0.9 MPa (130 psi) types is 1 psi.

Note 6) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is 350 Ω or less for an input current of 20 mA DC.

Note 7) The above characteristics are confined to the static state. When air is consumed on the output side, the pres-Note 8) The ITV1000 series is a Grease-free specification (Wetted parts).

ITV30□□

Note 9) Refer to the table below for communication specifications.

Note 10) Add 50 g for digital input type, 70 g for 16 points preset input type respectively.

Communication Specifications (CC, DE, PR, RC)

This range is outside

Input signal (%F.S.)

Figure 1. Input/output characteristics chart

f the control (output)

Serial-communications

model

Model		ITV□0□0-CC	ITV□0□0-DE	ITV□0□0-PR	ITV□0□0-RC
Protocol		CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)		Ver 1.10	Volume1 (Edition3.8), Volume3 (Edition1.5)	DP-V0	_
Communication speed		156 k/625 k 2.5 M/5 M/10 M bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps		9.6 kbps
Configula	ation file Note 2)	_	EDS	GSD	_
	pation area utput data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communicati	ion data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe		HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Electric insulation Note 4)		Insulation	Insulation	Insulation	Non-insulation
	ting resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)	_
Current c	consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less
	ITV1000	330	320	350	320
Weight	ITV2000	430	420	450	420
_	ITV3000	730	720	750	720

Note 1) Note that version information is subject to change.

Note 2) Configuration files can be downloaded from the operation manual page on SMC's website:http://www.smcworld.com Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply

ARJ AR425 to 935

ARX

AMR ARM

ARP

IR□-A IR

IRV VEX

SRH SRP

SRF

ITV

IC


ITVH


ITVX PVQ

VY1

VBA VBAT

AP100

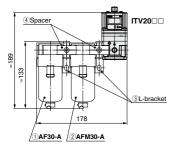

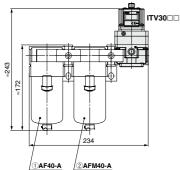

Made to Order

(Refer to pages 922 to 926 for details.)

Symbol	Specifications				
X102	Reverse type				
X224	High pressure type (SUP 1.2 MPa, OUT 1.0 MPa)				
X25	Set pressure range 1 to 100 kPa (Except ITV3000 series)				
X88	High speed response type (Except ITV3000 series)				
X26	X26 For manifold mounting (Except ITV3000 series)				
X410	Linearity: ±0.5% F.S. or less				
X420	X420 With alarm output				
Note 1) Ma	nifoldo ara compatible with 2 to 8 stations				

Note 1) Manifolds are compatible with 2 to 8 stations Consult with SMC for 9 stations or more.

Note 2) Products without symbols are also compatible. Consult with SMC separately.

Note 3) Compliant with CE marking

Model	Bracket tightening torque		
ITV1000	0.76 ± 0.05 N·m		
ITV2000/3000	1.5 ± 0.05 N·m		

Modular Products and Accessory Combinations

Applicable products and accessories	Applicable model				
Applicable products and accessories	ITV20□□	ITV30□□			
① Air filter	AF30-A	AF40-A			
② Mist separator	AFM30-A	AFM40-A			
③ L-bracket	B310L-A	B410L-A			
4 Spacer	Y30-A	Y40-A			
5 Spacer with L-bracket (3 + 4)	Y30L-A	Y40L-A			
6 Spacer with T-bracket	_	Y40T-A			

* For ITV10 ., use a modular adapter (Refer to page 643 for details).

Accessories (Option)/Part No.

[Bracket]

Applicable model	Description	Part No.
ITV10□□	Flat has also to a second by (in all all as a second in a second in a	P398010-600
ITV20□□, 30□□	Flat bracket assembly (including mounting screws)	P398020-600
ITV10□□	I hypothet comply (including mounting covery)	P398010-601
ITV20□□, 30□□	L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

Cable conflector						
Applicable model	Description		Part No.			
Current type Voltage type	Cable connector (4 cores)	Straight type 3 m	P398020-500-3			
4 points preset input	Cable conflector (4 cores)	Right angle type 3 m	P398020-501-3			
	Bower cable (4 cores)	Straight type 3 m	P398020-500-3			
16 points preset input	Power cable (4 cores)	Right angle type 3 m	P398020-501-3			
	Signal cable (5 cores)	Straight type 3 m	P398020-502-3			
		Right angle type 3 m	P398020-503-3			
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59			
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3			
DeviceNet™	. 6.1.6. 6.2.6 (1.66.66)	Right angle type 3 m	P398020-501-3			
	Dower cable (4 cares)	Straight type 3 m	P398020-500-3			
	Power cable (4 cores)	Right angle type 3 m	P398020-501-3			
RS-232C	Communication cables	Straight type 3 m	P398020-502-3			
	connector (5 cores)	Right angle type 3 m	P398020-503-3			

Note 1) For the 10-bit digital type, there is no right angle type cable connector.


Note 2) Even when 'with cable connector' is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.


[Bus adapter]

Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ


Dimensions

Flat bracket

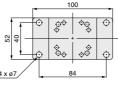

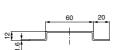

L-bracket

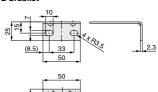




Working Principles

When the input signal rises, the air supply solenoid valve ① turns ON, and the exhaust solenoid valve ② turns OFF. Therefore, supply pressure passes through the air supply solenoid valve ① and is applied to the pilot chamber ③. The pressure in the pilot chamber ③ increases and operates on the upper surface of the diaphragm ④.

As a result, the air supply valve \S linked to the diaphragm \P opens, and a portion of the supply pressure becomes output pressure.

This output pressure feeds back to the control circuit ® via the pressure sensor ⑦. Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input signal.

Working Principle Diagram Pressure display ® Control Output signal Power supply Input signal circuit (7) Pressure sensor Pressure display ② Exhaust Air supply solenoid solenoid Power supply Output signal (8) Control valve valve circuit Input signal (7) Pressure sensor **EXH** 1 Air supply 2 Exhaust solenoid solenoid valve valve 4 Diaphragm 3 Pilot chamber EXH 6 Exhaust valve (4) Diaphragm Supply 3 Pilot chamber EXH valve Supply valve OUT SUP OUT SUP **EXH** 6 Exhaust valve ITV1000 ITV2000, 3000

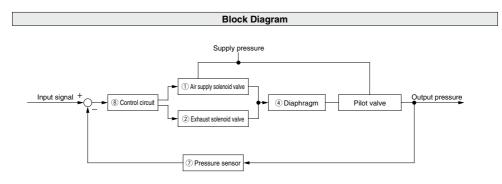

ØSMC

AR425 to 935

to 935

AMR

ARM

ARP IR□-A

IR IRV

VEX

SRH

SRF

IC.

ITVH


ITVX

PVQ VY1


VBAT VBAT

ITV101□ Series


Linearity

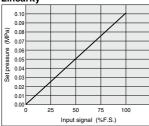


Hysteresis

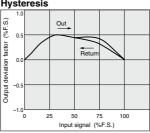


Repeatability

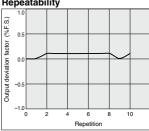


Pressure characteristics Set pressure: 0.05 MPa

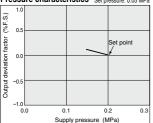


Flow rate characteristics Supply pressure: 0.2 MPa

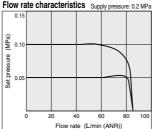


Relief flow characteristics

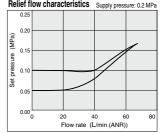


ITV201□ Series

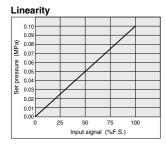


Hysteresis

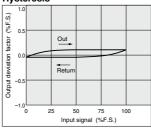


Repeatability

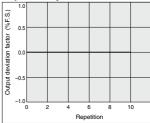


Pressure characteristics Set pressure: 0.05 MPa

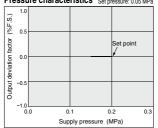

Flow rate characteristics Supply pressure: 0.2 MPa

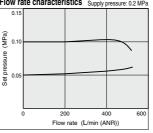


Relief flow characteristics Supply pressure: 0.2 MPa

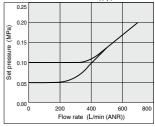



ITV301□ Series



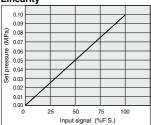

Hysteresis

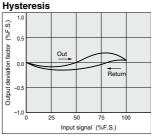

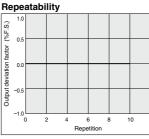


ARM ARP

ARJ


AR425 to 935

ARX


AMR

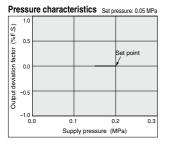

Flow rate characteristics Supply pressure: 0.2 MPa

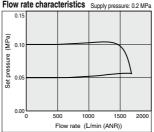

Relief flow characteristics Supply pressure: 0.2 MPa

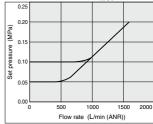

IR IRV

IR□-A

VEX

SRH SRP

SRF

ITV

IC

ITVH


ITVX PVQ

VY1 VBA VBAT


AP100

ITV103□ Series




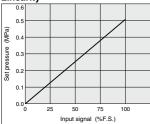


Hysteresis

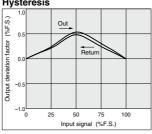


Repeatability

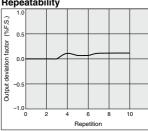


Pressure characteristics Set pressure: 0.2 MPa

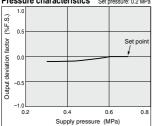

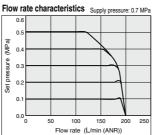


Relief flow characteristics

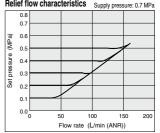


ITV203□ Series


Linearity

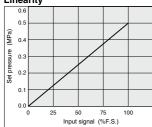


Hysteresis

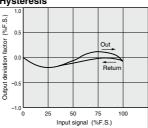


Repeatability

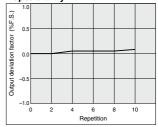


Pressure characteristics Set pressure: 0.2 MPa

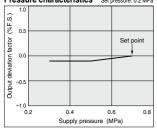

Flow rate characteristics Supply pressure: 0.7 MPa

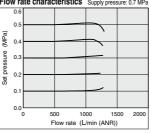


Relief flow characteristics Supply pressure: 0.7 MPa

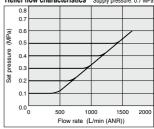



ITV303□ Series



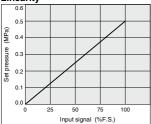

Hysteresis

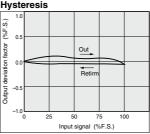

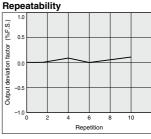

ARM ARP

IR□-A


IR


ARJ


AR425 to 935

ARX


AMR

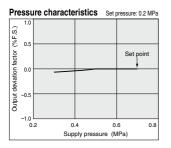

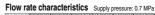

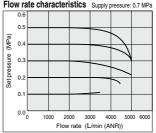

Relief flow characteristics Supply pressure: 0.7 MPa

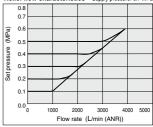

VEX SRH

IRV

SRP

SRF

ITV

IC

ITVH

ITVX


PVQ VY1

VBA VBAT


AP100

ITV105□ Series


Linearity

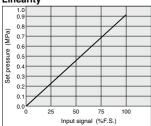


Hysteresis

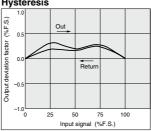


Repeatability

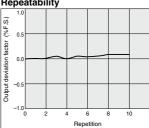


Pressure characteristics

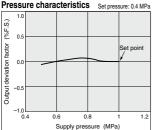


Flow rate characteristics Supply pressure: 1.0 MPa

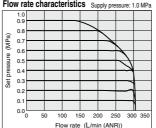


Relief flow characteristics Supply pressure: 1.0 MPa

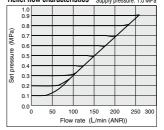


ITV205□ Series

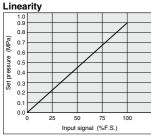


Hysteresis

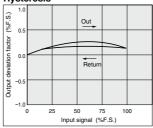


Repeatability

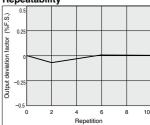


Pressure characteristics Set pressure: 0.4 MPa

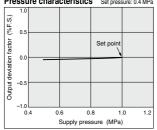


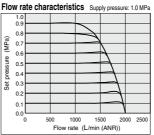



Relief flow characteristics Supply pressure: 1.0 MPa

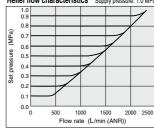



ITV305□ Series

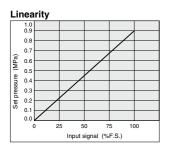


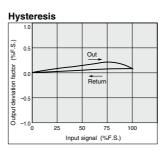

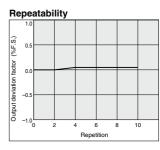

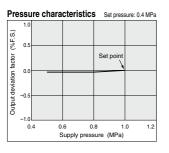

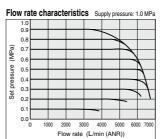

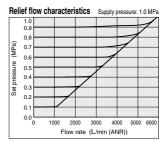

IRV VEX SRH SRP

ARJ

AR425 to 935

ARX

AMR

ARM

ARP

IR□-A

IR

SRF ITV IC

ITVH


ITVX PVQ

VY1 VBA VBAT

AP100

Construction

ITV1000

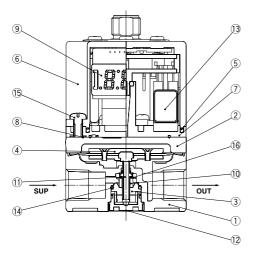


Main Component Parts

	No.	Description	Material	
		Description		
•	1	Body	Aluminum alloy	
	2	Cover	Aluminum alloy	
•	3	Valve guide	Resin	
			Aluminum alloy	
•	4	Diaphragm assembly	Weather resistant NBR	
			Steel	
	5	Seal	NBR	
	6	Bowl assembly	Resin	
	0	Bowl assembly	Silicone rubber	
	7	Sub-plate	Resin	
	8	Seal	NBR	
•	9	Control circuit assembly	_	
	10	Bumper	NBR	
•	11	Valve	Stainless steel	
	"	vaive	HNBR	
•	12	Guide retainer	Aluminum alloy	
	13	Solenoid valve	_	
•	14	O-ring	HNBR	
	15	Round head phillips screw	Steel	
•	16	Flat washer	Stainless steel	

^{*} Parts in contact with fluid are indicated with a mark .

ITV2000

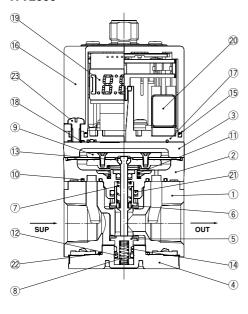


Main Component Parts

	Maill Component Parts						
	No.	Description	Material				
•	1	Body	Aluminum alloy				
*	2	Intermediate body	Aluminum alloy				
	3	Cover	Aluminum alloy				
◆	4	Valve guide	Aluminum alloy				
◆ <u>5</u> 6		Valve (Supply valve)	HNBR/Brass				
 6 7 		Valve (Exhaust valve)	HNBR/Brass				
		Valve spring	Stainless steel				
◆ <u>/</u> 8		Valve spring	Stainless steel				
			Stainless steel				
		Disabas and seconds.	Aluminum alloy				
•	9	Diaphragm assembly	Weather resistant NBR				
			Steel				
٠	10	Seal	NBR				
*	11	Bias spring	Stainless steel				
٠	12	O-ring	NBR				
♦	13	Cotter	Stainless steel				
♦	14	Wear ring	Resin				
	15	Seal	NBR				
	16	Boul secombly	Resin				
	16	Bowl assembly	Silicone rubber				
_	17	Sub-plate	Resin				
	18	Seal	NBR				
	19	Control circuit assembly	_				
-	20	Solenoid valve					
•	21	O-ring	NBR				
	22	O-ring	NBR				
-	23	Round head phillips screw	Steel				
- 7	5						

^{*} Parts in contact with fluid are indicated with a mark .

Construction

ITV3000

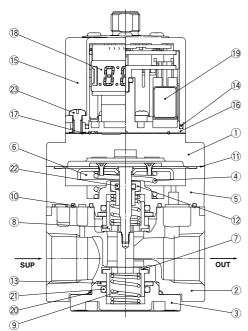

No.	Description	Material		
1	Cover	Aluminum alloy		
2	Body	Aluminum alloy		
3	Valve guide	Aluminum alloy		
4	Bias spring	Stainless steel		
5	Intermediate body	Aluminum alloy		
		Weather resistant NBR		
		Rolled sheet steel		
6	Diaphragm assembly	Stainless steel		
		Aluminum alloy		
		Steel		
7	Valve (Supply valve)	HNBR/Brass		
8	Valve (Exhaust valve)	HNBR/Brass		
9	Valve spring	Stainless steel		
10	Seal	NBR		
11	Seal	NBR		
12	Rod guide	Brass		
13	O-ring retainer	Aluminum alloy		
14	Seal	NBR		
15	David accombly	Resin		
15	Bowl assembly	Silicone rubber		
16	Sub-plate	Resin		
17	Seal	NBR		
18	Control circuit assembly	_		
19	Solenoid valve	_		
20	O-ring	NBR		
21	O-ring	NBR		
22	O-ring	NBR		
23 Round head Phillips screw		Steel		

 ^{*} Parts in contact with fluid are indicated with a mark ♠.

ARJ AR425 to 935

ARX AMR ARM

ARP

IR IRV

VEX

SRH

SRF

ITV

IC

ITVH

PVQ

VY1 VBA VBAT


AP100


Dimensions


ITV10□□

Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

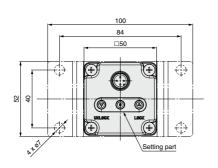


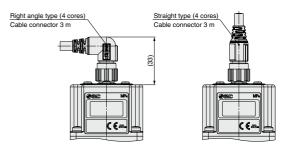

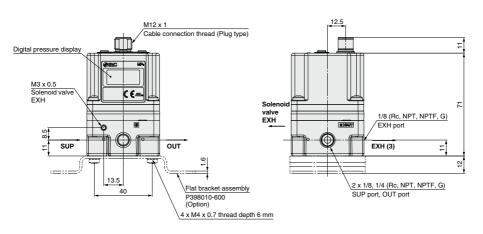


L-bracket

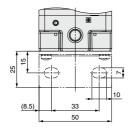

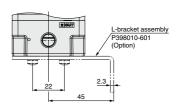

Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C

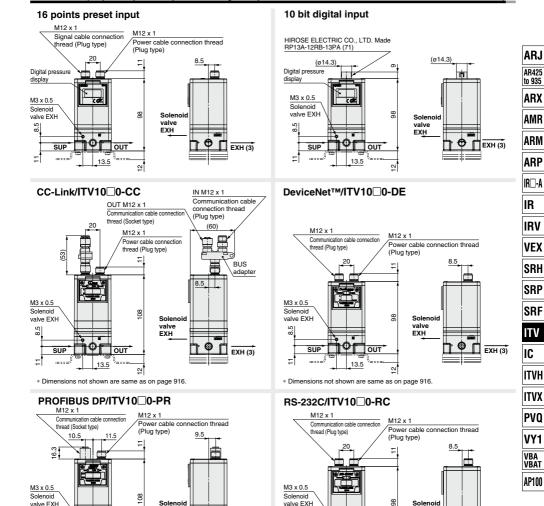

* Dimensions not shown are same as on page 916 With power cable connector * ITV10□0- CC common dimensions

OUT

13.5

Solenoid

valve

EXH

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 904.)

valve EXH

SUP




SMC

SUP

valve EXH

EXH (3)

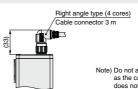

ď

OUT

13.5

* Dimensions not shown are same as on page 916.

Solenoid

valve

EXH

Note) Do not attempt to rotate, as the cable connector does not turn.

917


EXH (3)


Dimensions


ITV20□□

Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

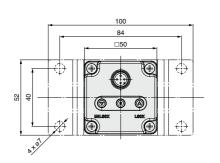


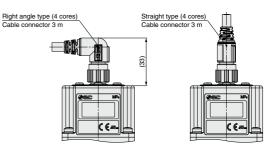

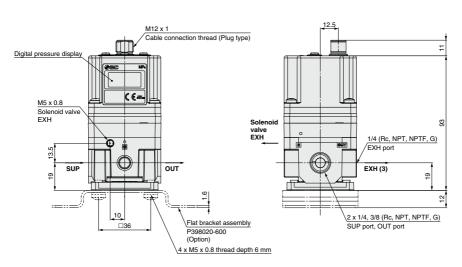


L-bracket

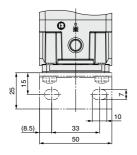

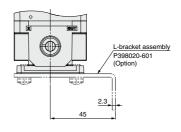

Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

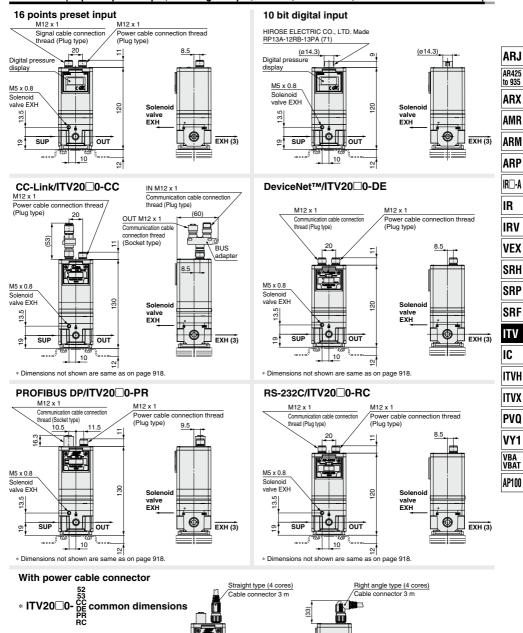

SMC

Note) Order communication cable

(other than 16 points, RS-232C)

separately. (Refer to page 904.)

919

Note) Do not attempt to rotate,

does not turn.


as the cable connector


Dimensions

ITV30□□


Flat bracket


Note) Do not attempt to rotate, as the cable connector does not turn.

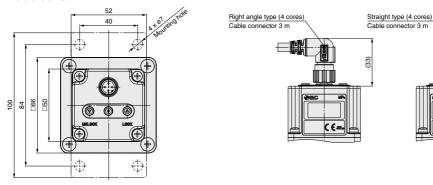

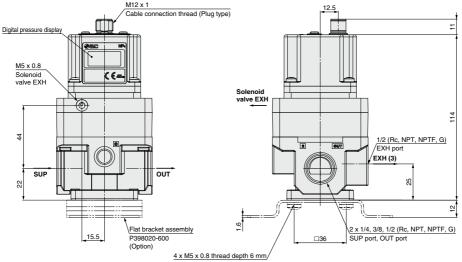


L-bracket

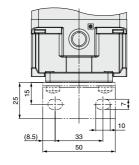

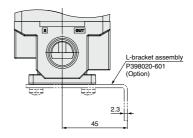

Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

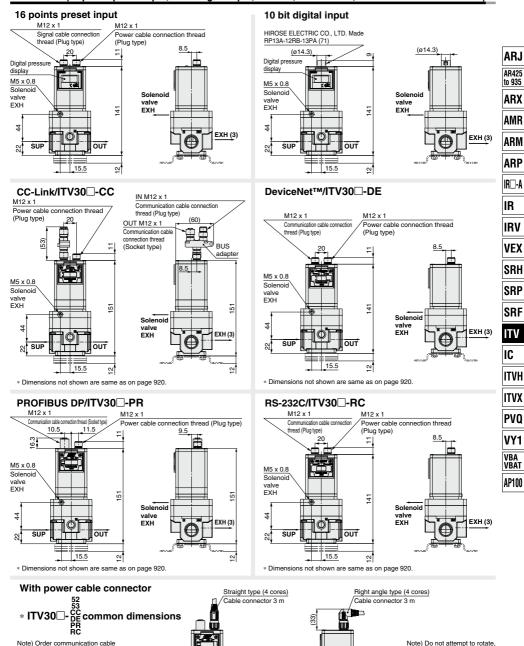

SMC

(other than 16 points, RS-232C)

separately. (Refer to page 904.)

921


as the cable connector

does not turn.



Please contact SMC for detailed dimensions, specifications and lead times.




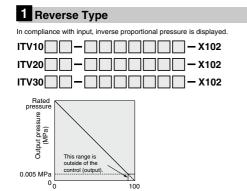

Input signal (%F.S.) Input/output characteristics chart

Note 1) \square in part number is the same model no. for the standard products. Note 2) Except for preset input type and digital input type.

Note 3) For communication models, consult SMC for availability.

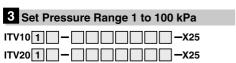

Note 1) For preset input type, digital input type and communication models, consult SMC for availability.

2 High Pressure Type (SUP 1.2 MPa, OUT 1.0 MPa)
ITV105 — X224
ITV205 — X224
ITV305 — X224

Note 1) For preset input type, digital input type and communication models, consult SMC for availability.

(F RoHS



Please contact SMC for detailed dimensions, specifications and lead times

4 High-Speed Response Time Type

Pressure response with no load is approx. 0.1 sec.

Note 1) This is not a guaranteed value as it depends on the operating environment.

Note 2) When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

Note 3) When operating for the first time, be sure that the power supply voltage and supply pressure are appropriate in relation to the operating environment and conditions

Note 4) For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained

If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

A) Change the power supply voltage in use by ± 0.4 VDC or more.

B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.


 $(0\% \rightarrow 100\% \rightarrow 0\%)$ (Change it gradually, waiting 10 s or more between each adjustment.)

* Please contact SMC if difficulty inputting signals occurs.

C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.

D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

When re-obtaining the parameters, we recommend operating with the air sealed in the piping in order to reliably reach the set pressure. In addition, if item A) above cannot be carried out, it is possible to conduct an "Initialize" operation as described in the operation manual in order to reset the parameters of the product to those set at the time of shipment. When conducting an "Initialize" operation, the min. set pressure (F_1) and the max. set pressure (F 2) will be reset.

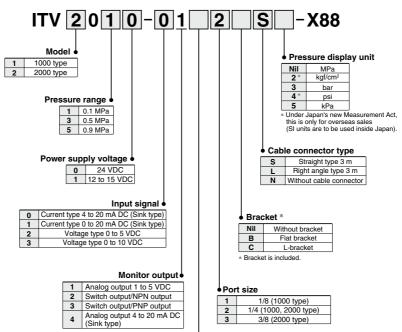

Thread type

Nil	Rc		
N	NPT		
Т	NPTF		
F	G		

ARJ AR425

to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV VEX

SRH

SRP SRF

IC

ITVH ITVX

PVO

VY1 VBA

VBAT

AP100

(E CAL US ROHS




Please contact SMC for detailed dimensions, specifications and lead times

5 Manifold Specifications (Except ITV3000 series)

2 through 8 station manifold

How to Order Manifolds

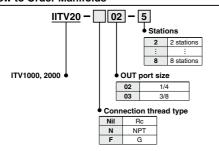

How to Order for Manifold Mounted



Note 1) ☐ in part number is the same model no. for the standard products.

Note 2) For communication models, consult SMC for availability.

Note 3) The thread type is Rc only.

Note 4) For ITV1000 series, the port size is 1/8 only.


Note 5) For ITV2000 series, the port size is 1/4 only.

Note 6) The bracket accessory can not be selected. Note 7) Not applicable to ITV3000 series

IITV20-02-31 set (3 station manifold base part no.)
` ' '
*ITV1030-311S-X261 set (Electro-pneumatic regulator part no.) Note 2)
*P398020-131 set (Blanking plate assembly part no.)
*ITV2050-212S-X261 set (Electro-pneumatic regulator part no.) Note 2)
The * is the symbol for mounting. Add the * symbol at the

beginning of part numbers for electro-pneumatic regulators, etc. to be mounted on the base

How to Order Manifold Assemblies

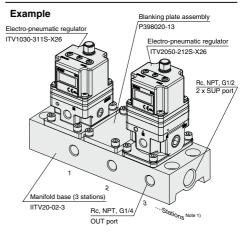

Note) Refer to the table below for possible mixed combination.

Model	ITV101□	ITV103□	ITV105□	ITV201□	ITV203□	ITV205□
ITV101□	•	_	_	•	_	_
ITV103□	_	•	•	_	•	•
ITV105□	_	•	•	_	•	•
ITV201□	•	_	_	•	_	_
ITV203□	_	•	•	_	•	•
ITV205□	_	•	•	_	•	•

Note 1) Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in front.

Note 2) The port size for mounted electro-pneumatic regulators is Rc 1/8 (ITV1000), Rc 1/4 (ITV2000) only.

Note 3) When there is a large number of stations, use piping with the largest possible inside diameter for the supply side, such as steel piping.

Note 4) The use of the straight type cable connector is recommended. To mount right angle type, be certain to check that no possible interference occurs.

Note 5) When mounting a blanking plate and the regulator with different pressure set, please inform SMC of the order of a manifold station beside a purchase order.

(E CAL US ROHS

ARJ

AR425

to 935

ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH

ITVX


PVQ

VY1 VBA VBAT AP100

Please contact SMC for detailed dimensions, specifications, and lead times

6 Linearity: $\pm 0.5\%$ F.S. or Less

Application examples: Polishing equipment and peripheral equipment for wafers, LCD glasses, color filters, etc.

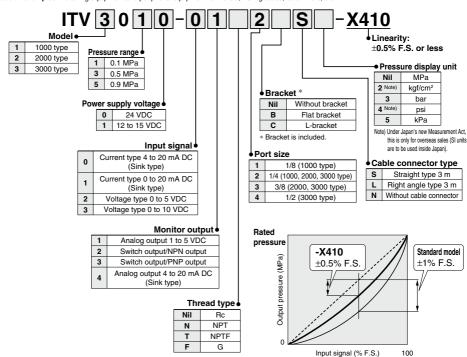

The graph shown above is a typical example. (This graph shows that the output pressure curve is in a negative range when compared to the ideal line.)

Specifications

Fluid		Air		
Minimum supply pressure		Set pressure +0.1 MPa		
Maximum supply	pressure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
Proof pressure	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)		
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
Set pressure range	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa		
Power supply vo	Itage	0: 24 VDC ±10%, 1: 12 to 15 VDC		
Current concum	ation	0.12 A or less (24 VDC ±10% type)		
Current consump	Juon	0.18 A or less (12 to 15 VDC type)		
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC		
Input impedance		Voltage type: Approx. 6.5 kΩ, Current type: 250 Ω or less		
Output signal		Analog output: 1 to 5 VDC/4 to 20 mA DC, Switch output (NPN/PNP)		
Linearity		±0.5% F.S. or less		
Hysteresis		0.5% F.S. or less		
Repeatability		±0.5% F.S. or less		
Sensitivity		0.2% F.S. or less		
Temperature cha	racteristics	±0.12% F.S./°C or less		
0.44	Accuracy	±2% F.S. ±1 digit or less		
Output pressure display	Minimum unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1		
Ambient and fluid	temperature	0 to 50°C (No condensation)		
Enclosure		IP65		
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (without brackets)		

The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.




(E CAL US ROHS

Please contact SMC for detailed dimensions, specifications, and lead times



7 With Alarm Output

Alarm is output if the set pressure is not reached or maintained for 5 seconds or more Application examples: Pressure management for thrust control, etc.

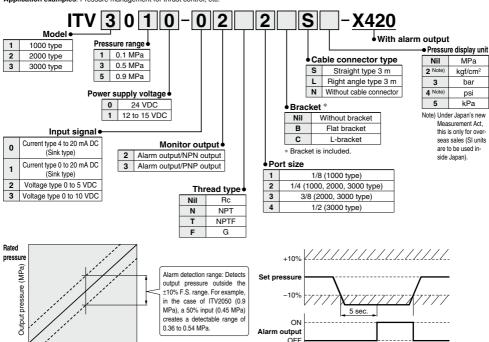

Input signal (% F.S.) Figure 1. Alarm output range

Specifications

Figure 2. Relationship between output pressure and alarm output

Fluid		Air		
Minimum supply pressure		Set pressure +0.1 MPa		
Maximum supply	pressure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
Dun of mune and	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)		
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)		
Set pressure range	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa		
Power supply vo	tage	0: 24 VDC ±10%, 1: 12 to 15 VDC		
0		0.12 A or less (24 VDC ±10% type)		
Current consump	tion	0.18 A or less (12 to 15 VDC type)		
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC		
Input impedance		Voltage type: Approx. 6.5 k Ω , Current type: 250 Ω or less		
Output signal		Alarm output (NPN/PNP)		
Linearity		±1.0% F.S. or less		
Hysteresis		0.5% F.S. or less		
Repeatability		±0.5% F.S. or less		
Sensitivity		0.2% F.S. or less		
Temperature cha	racteristics	±0.12% F.S./°C or less		
Output pressure display	Accuracy	±2% F.S. ±1 digit or less		
Output pressure display	Minimum unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1		
Ambient and fluid temperature		0 to 50°C (No condensation)		
Enclosure		IP65		
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (without brackets)		
		A second section of the		

ARJ

AR425 to 935

ARX

AMR

ARM

IR□-A

IR

IRV

VEX

SRH SRP

SRF

ITV

IC

ITVH ITVX

PVQ

VY1


VBA VBAT AP100

Compact Vacuum Regulator


ITV009□ Series

How to Order



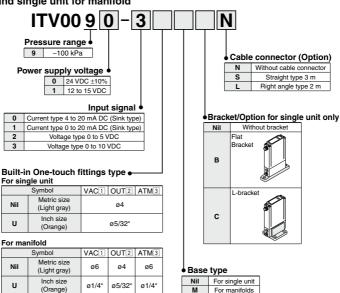



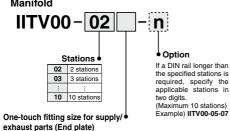

Note) A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

ø6 (Light gray) ø1/4" (Orange)

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.


IITV00-03.....1 set (Manifold part no.)

* ITV0090-3MS-----2 sets (Vacuum regulator part no. (1, 2 stations))

* ITV0090-3ML----1 set (Vacuum regulator part no. (3 stations)) Indicate part numbers in order starting from the first station on the D side

> → Note)Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk (*) specifies mounting. Add an asterisk (*) at the beginning of electro-pneumatic regulator part numbers to be mounted.

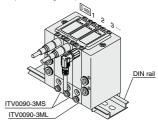



Compact Vacuum Regulator ITV009 Series

Specifications



Model			ITV009□	
Minimum supply pressure		Set pressure –1 kPa		
Maximum supply pressure		-101 kPa		
Set pressure range)		-1 to -100 kPa	
	Voltage		24 VDC ±10%, 12 to 15 VDC	
Power supply	Current consumption		oply voltage 24 VDC type: 0.12 A or less y voltage 12 to 15 VDC type: 0.18 A or less	
Input signal	Voltage type		0 to 5 VDC, 0 to 10 VDC	
input signai	Current type	4 to 20	0 mA DC, 0 to 20 mA DC (Sink type)	
Input impedance	Voltage type		Approx. 10 kΩ	
input impedance	Current type		Approx. 250 Ω	
Output signal Note 4)	Analog output	1 to 5 VDC (Output impedance: Approx. 1 kΩ) Output accuracy: ±6% F.S. or less		
Linearity			±1% F.S. or less	
Hysteresis			0.5% F.S. or less	
Repeatability		±0.5% F.S. or less		
Sensitivity		0.2% F.S. or less		
Temperature chara	cteristics	±0.12% F.S./°C or less		
Operating tempera	ture range	0 to 50°C (No condensation)		
Enclosure			IP65 equivalent *	
Connection type			Built-in One-touch fittings	
	For single	Metric size	1, 2, 3: ø4	
Connection size	unit	Inch size	1, 2, 3: ø5/32"	
Connection size	Manifold	Metric size	1, 3: ø6, 2: ø4	
	Mannold	Inch size	1, 3: ø1/4", 2: ø5/32"	
Weight Note 1)		100 g or less (without option)		

Note 1) Indicates the weight of a single unit.

For IITV00-n

Total weight (g) Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

Note 2) When there is a downstream flow consumption, pressure may become unstable depending on piping conditions.

Note 3) When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

Note 4) When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than

100 k Ω , the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.

* When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole prior to use. (For details, refer to "Specific Product Precautions 1" on page 941.)

Accessories (Option)

Bracket

Flat bracket assembly (including 2 mounting screws) P39800022



L-bracket assembly (including 2 mounting screws) P39800023



Tighting torque when assembling is 0.3 N·m.

Cable connector



Right angle type P398000-501-2



AR425 to 935

ARX AMR

ARM ARP

IR□-A

IRV VEX

SRH

SRP SRF

ITV

IC

ITVH

ITVX PVQ

VY1


VBA VBAT




Working Principle

When the input signal rises, the vacuum pressure soloenoid valve ① turns ON. Due to this, part of the vacuum pressure (VAC.) passes through the vacuum pressure solenoid valve ① and changes to a vacuum pressure. This vacuum pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, the vacuum pressure soloenoid valve and the atmospheric pressure soloenoid valve work alternately to make continuous pressure corrections until vacuum pressure becomes proportional to the input signal, thus, supplying vacuum pressure that is consistently proportional to the input signal.

Working Principle Diagram

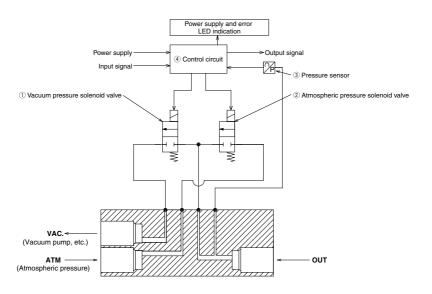



Block Diagram

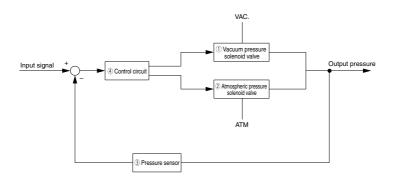



Compact Vacuum Regulator $ITV009 \square$ Series

ITV009□ Series

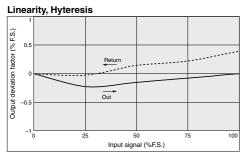

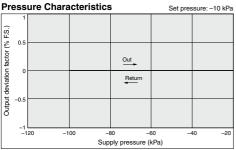

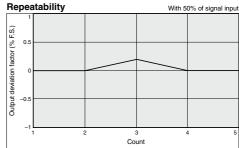

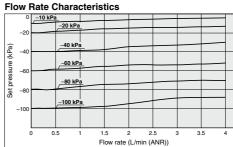

AR425 to 935

ARX

AMR

ARM

ARM

ARP

ARJ

IRV VEX

IR

SRH SRP

SRF

ITV IC


ITVH

ITVX PVQ

VY1

ITV009□ Series


Dimensions

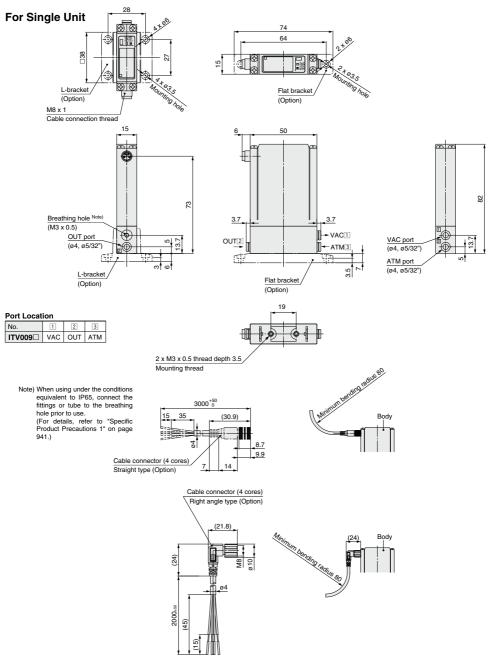



SMC


Dimensions

Single unit for manifold

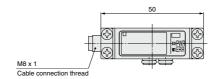

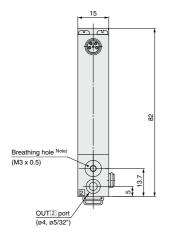


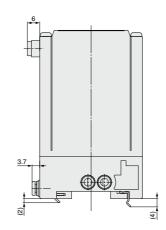

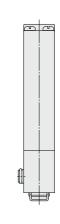

Note) When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole prior to use. (For details, refer to "Specific

(For details, refer to "Specific Product Precautions 1" on page 941.)

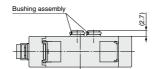

Note) For dimensions of the cable connector, refer to single unit on page 932.

AR425 to 935

ARX

AMR ARM

ARP

IR□-A IR

IRV

VEX

SRH

SRF

ITV IC

ITVH

ITVX PVQ


VY1

VBA VBAT AP100

ITV009□ Series

Dimensions


Manifold

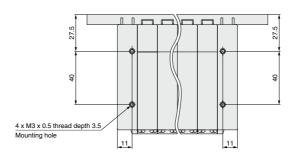



Port Location

No.	1	2	3
ITV009□	VAC	OUT	ATM

Note) Stations are counted starting from the D side.

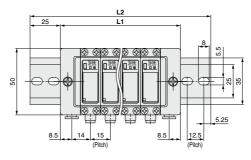

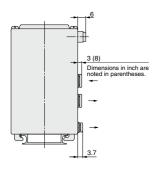

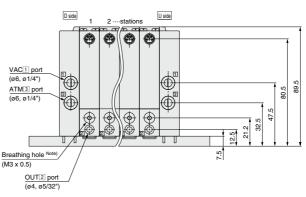

Note) For dimensions of the cable connector, refer to single unit on page 932.

									(mm)
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail (g)	20	22	27	29	31	34	36	41	43

Note) When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole prior to use.

(For details, refer to "Specific Product Precautions 1" on page 941.)

Electronic Vacuum Regulator

ITV2090/2091 Series

C C CRU'US ROHS



AR425

to 935 ARX

AMR

ARM

ARP

IR□-A

IR

IRV

VEX

SRH

SRP

SRF

IΤV

IC

ITVH

ITVX


PVQ

VY1

VBA VBAT

AP100

How to Order

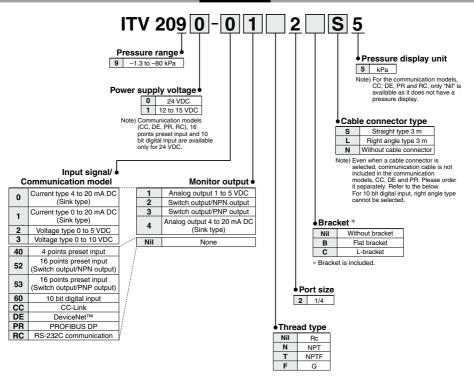

For communications cables, use the parts listed below (refer to M8/M12 connector in Best Pneumatics No.1-1 for details)


or order the product certified for the respective protocol (with M12 connector) separately.							
Application	Communication cable part number	Note					
CC-Link compatibility	PCA-1567720 (Socket type)	Dedicated Bus adapter supplied					
CC-LITIK COMPANDING	PCA-1567717 (Plug type)	with the product.					
DeviceNet™	PCA-1557633 (Socket type)	T-branch connector not supplied.					
compatibility	PCA-1557646 (Plug type)	1-branch connector not supplied.					
PROFIBUS DP	PCA-1557688 (Socket type)	T-branch connector not supplied.					
compatibility	PCA-1557691 (Plug type)	1-branch connector not supplied.					

Stepless control of vacuum pressure proportional to an electrical signal





Piping/Wiring Diagram

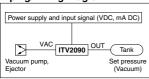

Standard Specifications

Mod	del	ITV2090	ITV2091		
Minimum supply vac	uum pressure Note 1)	Set pressure –13.3 kPa			
Maximum supply va		-101	kPa		
Set pressure rang	je	-1.3 to -	-80 kPa		
	Voltage	24 VDC ±10%	12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 VE Power supply voltage 12 to			
	Current type Note 2)	4 to 20 mA DC, 0 to 2	20 mA DC (Sink type)		
Input signal Note 7)	Voltage type	0 to 5 VDC,	0 to 10 VDC		
input signal 1000 17	Preset input	4 points (Negative common), 1	6 points (No common polarity)		
	Digital input	10 bit (F	Parallel)		
	Current type	250 Ω or	less Note 3)		
	Voltage type	Approx.	6.5 kΩ		
Input impedance	Preset input	Power supply voltage 24 VDC type: Approx. 4.7 k Ω Power supply voltage 12 VDC type: Approx. 2.0 k Ω			
	Digital input	Approx. 4.7 kΩ			
Output signal	Analog output	1 to 5 VDC (Output impedance: Approx. 1 k Ω) 4 to 20 mA DC (Sink type) (Output impedance: 250 Ω or less) Output accuracy \pm 6% F.S. or less			
(Monitor output)	Switch output	NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA			
Linearity		± 1% F.S. or less			
Hysteresis		0.5% F.S	S. or less		
Repeatability		± 0.5% F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature characteristics		± 0.12% F.S			
Output pressure	Accuracy	± 2% F.S. ± 1			
display	Units	kPa Note 5) Minimum display: 1			
Ambient and fluid	I temperature	0 to 50°C (No condensation)			
Enclosure		IP65			
Weight Note 7, 8)		390	O g		

Note 1) The minimum supply vacuum pressure should be 13.3 kPa less than the maximum vacuum pressure setting value. Note 2) 4 to 20 mA DC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required. Note 3) Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350 Ω or less

for an input current of 20 mA DC.

When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k Ω , the analog output monitor accuracy of within ±6% (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.

Note 4) Either analog output or switch output must be selected. Furthermore, when switch output is selected, either NPN output or PNP output must also be selected. Use caution that the preset input type is not equipped with an output signal function.

Note 5) Please contact SMC regarding indication with other units of pressure.

Note 6) The product characteristics are confined to the static state.

Pressure may fluctuate when air is consumed at the output side.

Note 7) Refer to the table below for communication specifications.

Note 8) Add 50 g for digital input type, 70 g for 16 points preset input type respectively.

Communication Specifications (CC, DE, PR, RC)

Model	ITV□0□0-CC□□	ITV□0□0-DE□□	ITV□0□0-PR□□	ITV□0□0-RC□□
Protocol	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C
Version Note 1)	Ver 1.10	Volume1 (Edition3.8), Volume3 (Edition1.5)	DP-V0	_
Communication 156 k/625 k speed 2.5 M/5 M/10 M bps		125 k/250 k/500 k bps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 M bps	9.6 kbps
Configulation file Note 2)	_	EDS	GSD	_
I/O occupation area (input/output data)	4 word/4 word, 32 bit/32 bit (per station, remote device station)	16 bit/16 bit	16 bit/16 bit	_
Communication data resolution	12 bit (4096 resolution)	12 bit (4096 resolution)	12 bit (4096 resolution)	10 bit (1024 resolution)
Fail safe	HOLD Note 3)/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD
Electric insulation Note 4)	Insulation	Insulation	Insulation	Non-insulation
Terminating resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)	_
Current consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less
Weight ITV2090	470	460	490	460

Note 1) Note that version information is subject to change.

Note 2) Configuration files can be downloaded from the operation manual page on SMC's website: http://www.smcworld.com
Note 3) The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Note 4) The insulation between the electrical signal of the communication system and ITV power supply



Working Principle


Pressure display Power supply ® Control Output signal Input signal circuit M. (7) Pressure sensor 1 Vacuum pressure 2 Atmospheric pressure solenoid valve solenoid valve Atmospheric pressure 4 Diaphragm (3) Pilot chamber Vacuum pressure VAC valve (Vacuum pump, etc. ATM OUT. (Atmospheric pressure) (Set pressure) 6 Atmospheric pressure valve


Working Principle

When the input signal increases, the vacuum pressure solenoid valve (1) turns ON, and the atmospheric pressure solenoid valve ② turns OFF. Because of this, VAC. and the pilot chamber ③ are connected, the pressure in the pilot chamber 3 becomes negative and acts on the top of the diaphragm 4


As a result, the vacuum pressure valve (§) which is linked to the diaphragm (4) opens, VAC. and OUT. are connected, and the set pressure becomes negative.


This negative pressure feeds back to the control circuit ® via the pressure sensor ⑦. Then, a correct operation works until a vacuum pressure proportional to the input signal is reached, and a vacuum pressure is obtained which is always proportional to the input signal.

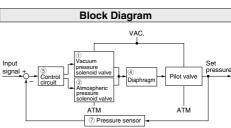


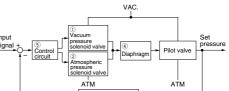


ITV209 ☐ Series

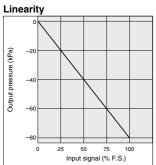


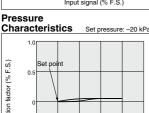

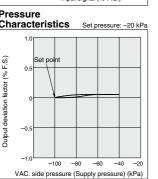




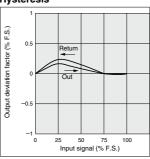

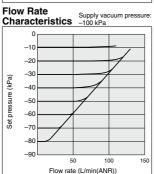

Repeatability

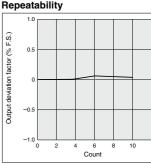

Flow rate characteristics measurement conditions

- · Exhaust flow rate of the vacuum pump
- used for measurement: 500 L/min (ANR)
- Inlet vacuum pressure: -100 kPa
- (When outlet flow rate is 0 L/min (ANR))
- Maximum flow rate: 132 L/min (ANR) (With inlet vacuum pressure at -39 kPa)



ARJ AR425

to 935 ARX

AMR ARM

ARP

IR□-A

IR

IRV VEX

SRH

SRP

SRF ITV

IC

ITVH ITVX

PVO VY1

VBA VBAT AP100


ITV209□ Series


Dimensions

ITV209□


Flat bracket


Note) Do not attempt to rotate the cable connector, as it does not turn.

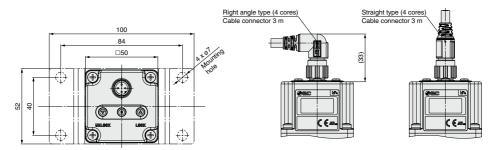

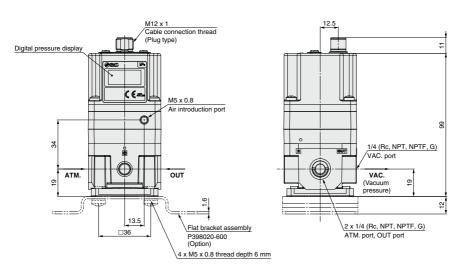


L-bracket

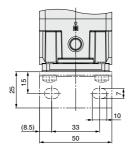

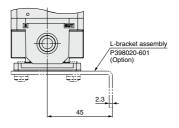

Dimensions (16 points preset input, 10 bit digital input, CC-Link, DeviceNet™, PROFIBUS DP and RS-232C)

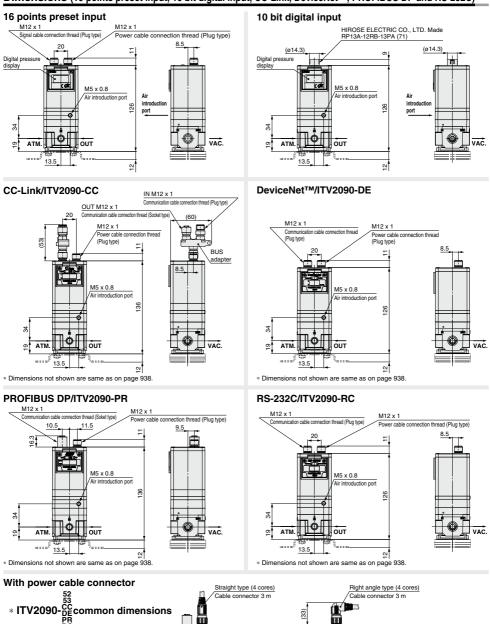

SMC

Note) Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 904.)

939

Note) Do not attempt to rotate the cable

connector, as it does not turn.

ARJ

AR425 to 935

ARX

AMR ARM

ARP Ir□-A

IR

IRV

VEX

SRH

SRP

SRF

IΤV

IC

ITVH

ITVX

PVQ

VY1 VBA VBAT



Accessories (Option)/Part No.

[Bracket]

Description	Part No.
Flat bracket assembly (including mounting screws)	P398020-600
L-bracket assembly (including mounting screws)	P398020-601

[Cable connector]

[easie comicotor]					
Applicable model	Descrip	otion	Part No.		
Current type Voltage type	Cable samuestan (4 samue)	Straight type 3 m	P398020-500-3		
4 points preset input	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3		
	Power cable (4 cores)	Straight type 3 m	P398020-500-3		
16 points preset input	Power cable (4 cores)	Right angle type 3 m	P398020-501-3		
16 points preset input	Signal cable (5 cores)	Straight type 3 m	P398020-502-3		
		Right angle type 3 m	P398020-503-3		
10 bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59		
CC-Link PROFIBUS DP	Power cable (4 cores)	Straight type 3 m	P398020-500-3		
DeviceNet™	rower cable (4 cores)	Right angle type 3 m	P398020-501-3		
	Downey ashle (4 serse)	Straight type 3 m	P398020-500-3		
	Power cable (4 cores)	Right angle type 3 m	P398020-501-3		
RS-232C	Communication cables	Straight type 3 m	P398020-502-3		
	connector (5 cores)	Right angle type 3 m	P398020-503-3		

Note 1) For the 10-bit digital type, there is no right angle type cable connector.


Note 2) Even when "with cable connector" is selected the communication cable is not included in the communication model (CC, DE, PR). Please order separately.

[Bus adapter]

[Dus adapter]		
Applicable model	Description	Part No.
CC-Link	Bus adapter (Bus adapter supplied with the product.)	EX9-ACY00-MJ


Dimensions



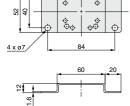

100

L-bracket

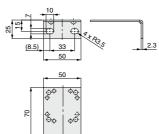

Model	Bracket tightening torque
ITV1000	0.76 ± 0.05 N·m
ITV2000/3000	1.5 ± 0.05 N·m



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV0000/009 ☐ Series Precautions

Air Supply

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 µm or less.
- 2. Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- 3. If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction.


For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".

Wiring

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage.

Further, use DC power with sufficient capacity and a low ripple.



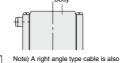



nector is to downwards (SUP port side). Never turn the connector as it is not designed to turn. Using force to turn the connector will damage the connector couplina.

available. The entry direction

for the right angle type con-



Wiring Diagrams

Current signal type




Vs: Power Supply 24 VDC ±10% 12 to 15 VDC A: Input signals 4 to 20 mA DC 0 to 20 mA DC

Voltage signal type



Vs : Power Supply 24 VDC ±10% 12 to 15 VDC Vin: Input signals 0 to 5 VDC 0 to 10 VDC

Monitor output wiring diagram

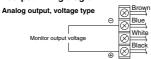

Handling

ARJ AR425

to 935

ARX

AMR

ARM

ARP

IR□-A

IRV

VEX

SRH

SRP

SRF

ITV

IC

ITVH

ITVX

PVO

VY1

VBA

VBAT

AP100

∕ Caution

- 1. Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated.
 - Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 6. The optional cable connector is a 4 wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 7. Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 8. Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 9. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- 10. For details on the handling of this product, refer to the operation manual which is included with the product.
- 11. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole. Mount a fitting and tube (M-3AU-3 fitting and TIU01m-mm tube recommended) onto Breathing the breathing hole and run the tube to a lohole M3 x 0.5

cation not exposed to moisture or dust, etc.

0



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV0000/009 ☐ Series Precautions

Handling

12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.

 Each product needs to be powered by one power supply unit.

The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.

- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained.

If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

- A) Change the power supply voltage in use by ± 0.4 VDC or more.
- B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.
 - $(0\% \to 100\% \to 0\%)$ (Change it gradually, waiting 10 s or more between each adjustment.)
 - * Please contact SMC if difficulty inputting signals occurs.
- C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.
- D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

While conducting the procedure stated above, noise may be generated by the solenoid valve. However, this does not affect the obtainment of the parameters. In addition, be sure to conduct the procedure with the air sealed in the piping.

Return of Product

∧ Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

ARJ

AR425 to 935

ARX AMR

ARM

ARP

IR□-A

IRV

VEX

SRH

SRF

ITV

IC ITVH

ITVX

PVQ VY1

> VBA VBAT





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV1000/2000/3000/209 ☐ Series Precautions


Piping

⚠ Warning

 Screw piping together with the recommended proper torque while holding the side that has female threads.


Looseness or faulty sealing will occur if tightening torque is insufficient, while thread damage will result if the torque is excessive. Furthermore, if the side with the female threads is not held while tightening, excessive force will be applied directly to piping brackets, etc. causing damage or other problems.

		Recomme	ended proper	torque: N · m
Connection thread	1/8	1/4	3/8	1/2
Torque	3 to 5	8 to 12	15 to 20	20 to 25

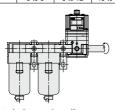

Do not allow twisting or bending moment to be applied other than the weight of the equipment itself.

Provide separate support for external piping, as damage may otherwise occur.

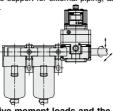

 Since excessive moment loads and the propagation of vibrations, etc. can easily result from inflexible piping made of materials such as steel, avoid these problems by using flexible tubing for intermediate connections.

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

If chips, sealing material or other debris enter into this product, the solenoid valve may buzz, or the outlet pressure may not be output normally.

2. Winding of sealant tape

When screwing together pipes and fittings, etc., be certain that chips from the pipe threads and sealing material do not get inside the piping.

Also, when sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



Operating Environment

⚠ Warning

- Do not operate in locations having an atmosphere of corrosive gases, chemicals, sea water, or where there will be contact with the same.
- Do not operate in locations where vibration or impact occurs.

- In locations where the body is exposed to water, steam, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To overcome this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is at a location where no water splash, etc. occurs. Make sure not to bend, or block the I.D. of the tubing as this will have a detrimental affect on the pressure control.
- Do not operate in locations where vibration or impact occurs.
- In locations which receive direct sunlight, provide a protective cover, etc.
- In locations near heat sources, block off any radiated heat.
- In locations where there is contact with spatter from water, oil or solder etc., implement suitable protective measures.

Air Supply

⚠ Warning

1. Type of fluids

Please consult with SMC when using the product in applications other than compressed air.

Do not use compressed air that contains chemicals, synthetic oils including organic solvents, salt or corrosive gases, etc., as it can cause malfunction.

⚠ Caution

- 1. Install an air filter near this product on the supply side. Select a filtration degree of 5 μ m or less.
- Compressed air containing large amounts of drainage can cause malfunction of this product and other pneumatic equipment. As a countermeasure, install an aftercooler, air dryer or Drain Catch, etc.
- If large amounts of carbon dust are generated by the compressor, it can accumulate inside this product and cause malfunction. For details on the above compressed air quality, refer to SMC's "Air Preparation Systems".



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV1000/2000/3000/209 ☐ Series Precautions

Handling

∕ Caution

- Do not use a lubricator on the supply side of this product, as this can cause malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side. However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If power to this product is cut off due to a power failure, etc. when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. The setting side pressure cannot be completely released from this product in the range below 0.005 MPa (or -1.3 kPa for Vacuum models). In cases where the pressure needs to be reduced completely to 0 MPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as this can lead to malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as this can cause malfunction.
- 8. When connecting the cable to this product, turn the lock ring of the cable. If a portion other than the lock ring of the cable is turned, it may damage the connector on the body. Turn the lock ring by hand without using a tool.
- The right angle cable does not rotate and is limited to only one entry direction. If the right angle cable is rotated forcibly, the cable may be broken or damaged, or may damage the connector on the body.
- 10. Take the following steps to avoid malfunction due to noise.
 - Remove power supply noise during operation by installing a line filter, etc. in the AC power line.
 - For avoiding the influence of noise or static electricity, install
 this product and its wiring as far as possible from strong
 electric fields such as those of motors and power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 11. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC AN20 or AN40 series) on the exhaust port (EXH port). The port sizes are Rc 1/8, Rc 1/4 and Rc 1/2.
- Specifications on pages 905 and 936 is in case of static environment. Pressure may fluctuate when air is consumed at the output side.

- For details on the handling of this product, refer to the operation manual which is included with the product.
- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. The solenoid valves built into this product are consumables. Perform periodic maintenance in environments where the solenoid valves are operated at a high frequency. The parts can be replaced with a solenoid valve assembly. Please contact SMC for the part number.

ARJ

AR425 to 935

ARX AMR

ARM

ARP

IR□-A

IR IRV

VEX

SRH

SRF

ITV

IC ITVH

PVQ

VY1



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV1000/2000/3000/209 ☐ Series Precautions

Design and Selection


⚠ Caution

- Use the following UL approved products for DC power supply combinations.
- (1) Limited voltage current circuit in accordance with UL 508. A circuit in which power is supplied by the secondary coil of a transformer that meets the following conditions.
 - · Maximum voltage (with no load):
 - 30 Vrms (42.4 V peak) or less
 - Maximum current:
 - (1) 8 A or less (including when short circuited)
 - (2) limited by circuit protector (such as fuse) with the follow-

ing ratings.

No load voltage (V peak)	Max. current rating
0 to 20 [V]	5.0
Over 20 and 30 or less [V]	100
Over 20 and 30 or less [v]	Peak voltage

- (2) A circuit (class 2 circuit) with maximum 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit confirming to UL1310, or a class 2 transformer confirming to UL1585.
- 2. Operate these products only within the specified voltage. Using voltages beyond the specified levels could cause faults or malfunctions.
- Use 0 V as the baseline for the power supplied to the unit for output, control and input.

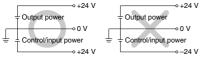

Each product needs to be powered by one power supply unit.

The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.

5. Consult SMC for the usage when the downstream side is released to atmosphere.

This product is a pressure controller. The downstream side being released to atmosphere makes the inlet valve full open, allowing a large amount of atmosphere flow into the body. Consult SMC for the appropriate usage when you use the product under such condition since the product may not meet the specification or the life of the product may be shortened.

ARJ

AR425 to 935

ARX

AMR

ARP

IR□-A

IR

IRV

VEX SRH

SRP

SRF

IC

ITVH

PVQ

VY1






Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV1000/2000/3000/209 ☐ Series Precautions

Wiring

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can cause damage. Further, use DC power with sufficient capacity and a

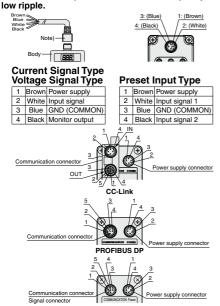

DeviceNet™, RS-232C, 16 points preset

	IN/	IN/OUT communication connector						
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset			
1	SLD [-]	DRAIN [-]	No connection	No connection	Input signal 1 [Brown]			
2	DB [White]	V+ [Red]	RxD/TxD-N [Green]	TxD [White]	Input signal 2 [White]			
3	DG [Yellow]	V- [Black]	No connection	RxD [Blue]	Input signal 3 [Blue]			
4	DA [Blue]	CAN_H [White]	RxD/TxD-P [Red]	GND [Black]	Input signal 4 [Black]			
5	No connection	CAN_L [Blue]	No connection	No connection	Common [Gray]			

		Power supply connector								
Pin No.	CC-Link	DeviceNet™	PROFIBUS DP	RS-232C	16 points preset					
1 [Brown]	Vcc	Vcc	Vcc	Vcc	Vcc					
2 [White]	FG	Can not connect	FG	No connection	No connection					
3 [Blue]	GND	GND	GND	GND	GND					
4 [Black]	No connection	Can not connect	No connection	FG	Monitor output					

Note 1) The indicated wire colors are when a cable connector made by SMC is used. Note 2) The cable is also available in a right angle type. (Communication cable:

straight type only)

A right angle type connector is attached facing left (towards the SUP port). On communication models, the connector faces backwards (towards the EXH port). Do not attempt to rotate, as the connector does not turn.

Note 3) Perform the wiring so that no electric potential difference occurs between GND of the power supply and GND of the communication section. If any electric potential difference occurs, this may cause the internal parts to burn out.

■ Trademark Information

DeviceNet™ is a trademark of ODVA

Knock-down connectors * Order separately.

Application	CC- compa	Link atibility		eviceNet ¹ ompatibili			OFIBUS ompatibili	
Part number	Plug PCA-	Socket PCA-	Plug PCA- 1557659	Socket PCA-	Terminal Plug PCA-	Plug PCA-	Socket PCA-	Terminal Plug PCA-

Wiring diagram

Current signal type



Vs : Power supply 24 VDC 12 to 15 VDC

4 to 20 mA DC A : Input signal 0 to 20 mA DC

Voltage signal type



Vs : Power supply 24 VDC 12 to 15 VDC Vin: Input signal 0 to 5 VDC


4 points preset input type



Vs : Power supply 24 VDC 12 to 15 VDC (Negative common)

16 points preset input type

0 to 10 VDC

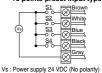

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2.

S1	OFF	ON	OFF	ON	OFF		ON	OFF	ON
S2	OFF	OFF	ON	ON	OFF		OFF	ON	ON
S3	OFF	OFF	OFF	OFF	ON		ON	ON	ON
S4	OFF	OFF	OFF	OFF	OFF		ON	ON	ON
Preset pressure	P01	P02	P03	P04	P05		P14	P15	P16

- * For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.
- * Preset pressures are set based on the minimum unit for output display.

MPa	kgf/cm ²	bar	psi	kPa
0.001	0.01	0.01	0.1	1

· Note that this is 1 psi for 130 psi types.

.

10 bit digital input t	ype
Wire color	Signal name
Pink-Black 2	Power supply (24 VDC)
Green-Black 2	Power supply (GND)
Blue	Signal Common (No Polarity)
Blue-Black 2	MSB 10 bit
Gray-Black 1	9 bit
Orange-Black 1	8 bit
Green-Black 1	7 bit
Pink-Black 1	6 bit
Blue-Black 1	5 bit
Gray	4 bit
Orange	3 bit
Green	2 bit
Pink	LSB 1 bit

Note) The wire color is shown for when an option cable





Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

.

ITV1000/2000/3000/209 ☐ Series Precautions Wiring Monitor output wiring diagram Analog output: Voltage type Analog output: Current type (Sink type) Monitor output voltage White Monitor output voltage Switch output: NPN type Switch output: PNP type Load White Load

*When 80 mA DC or more is applied, detecting device for overcurrentstarts activating and then emits an error signal. (Error number "5")

Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

Set pressure range, by unit of standard measured pressure

			, ,							
Unit		Set pressure range								
Uniii	IT۱	ITV□01□		ITV□03□		ITV□05□)5□	ITV209□	
MPa	0.005	to	0.1	0.005	to	0.5	0.005	to	0.9	_
kgf/cm ²	0.05	to	1	0.05	to	5	0.05	to	9	_
bar	0.05	to	1	0.05	to	5	0.05	to	9	_
psi	0.7	to	15	0.7	to	70	0.7	to	130	_
kPa	5	to	100	5	to	500	5	to	900	-1.3 to -80

CE Marking									
TV0000 Series									
Model	Ferrite core	Recommended							

M8-4DSX3MG4 (Straight type) ITV0000-□□-Q Unnecessary P398000-501-2 (Right angle type) Note) Recommended power supply cable length is 3 m. (P398000-501-2 is 2

m.) If any other length is desired, please consult with SMC.

• ITV1000/2000/3000 Series

Model	Ferrite core necessity		Recommended power supply cable
ITV=====		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-52□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
ITV□□-53□		Signal	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)
ITV□□-60□		_	INI-398-0-59 (Straight type)
ITV 🗆 - CC	Unnecessary	Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 3)		Communication	PCA-1567720 (Socket type) PCA-1567717 (Plug type)
ITV□□-DE□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557633 (Socket type) PCA-1557646 (Plug type)
ITV□□-PR□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
Note 2) Note 4)		Communication	PCA-1557688 (Socket type) PCA-1557691 (Plug type)
ITV□□-RC□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)
II VUU-RCU		Communication	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)

Note 1) Recommended power supply cable length is 3 m. If any other length is desired, please consult with SMC.

Note 2) Even when the "with cable connector" type is selected, the communication connector is not included. Refer to the catalog [M8/M12 Connector] CAT.ES100-73 for the details of the communication cable.

Note 3) For CC-Link compatible products, a dedicated Bus adapter is included with the product. Note 4) For DeviceNet™ compatible products, and PROFIBUS DP compatible products, a T-branch connector is not included with the product.

Return of Product

⚠ Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item. Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful euhetancee

If you have any further questions, please don't hesitate to contact your SMC sales representative.



ARJ

AR425 to 935 ARX

AMR ARM

ARP

IR□-A IR

IRV VEX

> SRH SRP

SRF

IC

ITVH ITVX

PVQ

VY1 VBA

VBAT AP100



Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 387 to 391 for Common Precautions.

ITV009□/209□ Series Precautions

Handling

∕ Caution

- 1. Connect the vacuum pump to the port, which is lab-eled "VAC".
- Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- 3. When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labeled "ATM".
- Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping, etc. should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc. when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.
- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3 port valve, etc. on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can cause failure.

Handling

- 12. The optional cable connector is a 4-wire type. When the monitor output (analog output, switch output) is not being used, keep it from touching the other wires, as this can cause malfunction.
- Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- Take the following steps to avoid malfunction due to noise.
 - 1) Eliminate power supply noise during operation by installing a line filter, etc. in the AC power line.
 - For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors and power lines, etc.
 - 3) Make sure to take protective measures against load surge for an induction load (solenoid valves, relays, etc.).
- Refer to the operation manual included with the product for details on its handling.

Return of Product

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.